
OPERATOR QUICK GUIDE

CONFIDENT FROM FIRST POWER-ON.

A clear commissioning and daily-use guide for platform scale operators.

MODEL-X OPERATOR GUIDE

Simple routines for setup, safe operation, cleaning and first-line troubleshooting.



Four habits protect every reading.



Level

Place the scale on a stable surface and confirm all feet are firmly supported.



Zero

Power on unloaded, allow stabilization and confirm a true zero indication.



Load

Centre the item, avoid shock loading and stay within rated capacity.



Record

Wait for a stable indication before printing, noting or transmitting the result.



Clean

Remove debris with power isolated; do not flood non-washdown components.



Check

Use known test loads on a defined schedule and document unusual drift.

WHY IT MATTERS

Consistent setup and handling help reduce avoidable errors, downtime and premature component wear.

IF A READING LOOKS WRONG

Troubleshoot in a safe sequence

01

Unload and re-zero

Remove all contact with the platform, check debris and re-establish zero.

02

Check stability

Inspect floor contact, vibration, drafts, cabling and nearby electrical noise.

03

Restart correctly

Isolate power, wait briefly and restart with the platform completely unloaded.

04

Escalate calibration

If variance remains, stop adjustment and contact authorized SKPL service.

Need commissioning or service support?

+91 98901 69492 / shreekumbhareenterprise@gmail.com / Satara, Maharashtra

CONTACT TECHNICAL SUPPORT

Model-specific calibration requires authorized documentation.